


## BLADE INSTALLATION

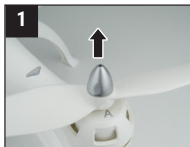

Pull off Finishing Cap.




Loosen the screw on the Locking Washer (counter-clockwise).



Remove the Locking Washer and broken blade.




Match the New Blade to the appropriate drone arm (A or B).

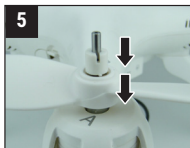

Put on the New Blade and Locking Washer; Line up the groove of the Locking Washer with the hole in the drone axel.



Tighten the screw on the Locking Washer (clockwise).

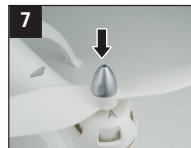

Re-apply the Finishing Cap.

## **WARNING:**

- Please operate strictly as the instruction shown on the instruction manual when debugging or assembling this aircraft. During the process of flying or landing, please pay more attention to keep 1-2 meters away between the user and the aircraft so as to avoid colliding to the head or face or body, etc. or even cause injury.
- Children should use this product under the guidance of the adult. This product is FORBIDDEN to be used by children under 14 years old.
- Please correctly assemble it or use this product as the correct instruction shown on the instruction manual or packing instruction. Some parts should be assembled by the adult.
- Small parts are contained in this product. Please place it beyond the reach of the children so as to avoid CHOKING HAZARD or mistakenly swallowed.
- Please collect the packing material timely so as not to cause injury to the children.



**MADE IN CHINA**